# Operating Instructions **Memosens CLS21E**

Conductivity sensor with Memosens protocol For conductive measurement of conductivity in liquids







Table of contents Memosens CLS21E

# Table of contents

1 1.1 1.2 1.3	About this document3Warnings3Symbols3Documentation3
2 2.1 2.2 2.3 2.4 2.5	Basic safety instructions4Requirements for personnel4Designated use4Workplace safety4Operational safety5Product safety5
3	Incoming acceptance and
3.1 3.2 3.3 3.4	product identification5Incoming acceptance5Product identification6Scope of delivery6Certificates and approvals7
<b>4</b> 4.1 4.2 4.3	Installation8Installation conditions8Mounting the sensor10Post-installation check10
<b>5</b> 5.1 5.2 5.3	Electrical connection10Connecting the sensor11Ensuring the degree of protection11Post-connection check11
6	Commissioning 12
7	Maintenance 12
8 8.1 8.2 8.3 8.4	Repair13General information13Spare parts14Return14Disposal14
<b>9</b> 9.1 9.2 9.3	Accessories15Assemblies15Measuring cable16Calibration solutions17
<b>10</b> 10.1	Technical data       17         Input       17

- d -		20
10.5	Mechanical construction	19
	Process	
10.3	Environment	18

10.2 Performance characteristics . . . . . . . 17

Memosens CLS2 1E About this document

# 1 About this document

# 1.1 Warnings

Structure of information	Meaning			
A DANGER  Causes (/consequences)  If necessary, Consequences of non- compliance (if applicable)  ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation <b>will</b> result in a fatal or serious injury.			
WARNING  Causes (/consequences)  If necessary, Consequences of non- compliance (if applicable)  ► Corrective action	This symbol alerts you to a dangerous situation.  Failure to avoid the dangerous situation <b>can</b> result in a fatal or serious injury.			
Causes (/consequences) If necessary, Consequences of non- compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.			
NOTICE Cause/situation If necessary, Consequences of non- compliance (if applicable) Action/note	This symbol alerts you to situations which may result in damage to property.			

# 1.2 Symbols

Symbol	Meaning
i	Additional information, tips
<b>✓</b>	Permitted or recommended
×	Not permitted or not recommended
A	Reference to device documentation
	Reference to page
	Reference to graphic
L.	Result of a step

# 1.3 Documentation

The following manual which complements these Operating Instructions can be found on the product page on the Internet:

Technical Information Memosens CLS21E, TIO1528C

Basic safety instructions Memosens CLS21E

In addition to these Operating Instructions, an XA with "Safety instructions for electrical apparatus in the hazardous area" is also included with sensors for use in the hazardous area.

▶ Please follow instructions on use in the hazardous area carefully.

# 2 Basic safety instructions

# 2.1 Requirements for personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.
- Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

# 2.2 Designated use

The conductivity sensor is designed for the conductive measurement of the conductivity of liquids.

It is used in the following areas:

Measurements in media with medium or high conductivity

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

# 2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

#### Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

# 2.4 Operational safety

#### Before commissioning the entire measuring point:

- 1. Verify that all connections are correct.
- 2. Ensure that electrical cables and hose connections are undamaged.
- 3. Do not operate damaged products, and protect them against unintentional operation.
- 4. Label damaged products as defective.

#### **During operation:**

► If faults cannot be rectified: products must be taken out of service and protected against unintentional operation.

# 2.5 Product safety

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.

# 3 Incoming acceptance and product identification

# 3.1 Incoming acceptance

- 1. Verify that the packaging is undamaged.
  - Wotify the supplier of any damage to the packaging.
     Keep the damaged packaging until the issue has been resolved.
- 2. Verify that the contents are undamaged.
  - Notify the supplier of any damage to the delivery contents. Keep the damaged goods until the issue has been resolved.
- 3. Check that the delivery is complete and nothing is missing.
  - igspace Compare the shipping documents with your order.
- **4.** Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
  - The original packaging offers the best protection.

    Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

#### 3.2 Product identification

#### 3.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Extended order code
- Serial number
- Safety information and warnings
- ► Compare the information on the nameplate with the order.

#### 3.2.2 Identifying the product

#### Product page

www.endress.com/cls21e

#### Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

## Obtaining information on the product

- 1. Go to www.endress.com.
- 2. Call up the site search (magnifying glass).
- 3. Enter a valid serial number.
- 4. Search.
  - ► The product structure is displayed in a popup window.
- 5. Click on the product image in the popup window.
  - A new window (**Device Viewer**) opens. All of the information relating to your device is displayed in this window as well as the product documentation.

#### Manufacturer address

Endress+Hauser Conducta GmbH+Co. KG Dieselstraße 24 D-70839 Gerlingen

# 3.3 Scope of delivery

The scope of delivery includes:

- Sensor in the version ordered
- Operating Instructions

## 3.4 Certificates and approvals



Certificates and approvals are optional, i.e. they depend on the product version.

#### 3.4.1 C€ mark

#### **EU Declaration of Conformity**

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CE mark.

## 3.4.2 Marine approvals

A selection of the devices and sensors have type approval for marine applications, issued by the following classification societies: ABS (American Bureau of Shipping), BV (Bureau Veritas), DNV-GL (Det Norske Veritas-Germanischer Lloyd) and LR (Lloyd's Register). Details of the order codes of the approved devices and sensors, and the installation and ambient conditions, are provided in the relevant certificates for marine applications on the product page on the Internet.

#### 3.4.3 Test reports

#### Manufacturer inspection certificate

Stating the individual cell constant

#### 3.4.4 Additional certification

#### Inspection certificate in accordance with EN 10204 3.1

A test certificate 3.1 in accordance with EN 10204 is supplied depending on the version ( $\rightarrow$  Product Configurator on the product page).

#### 3.4.5 Other standards and quidelines

#### **EAC**


The product has been certified according to guidelines TP TC 004/2011 and TP TC 020/2011 which apply in the European Economic Area (EEA). The EAC conformity mark is affixed to the product.

Installation Memosens CLS21E

# 4 Installation

# 4.1 Installation conditions

The sensors are installed directly via the process connection. As an option, the sensor can also be installed via a flow or immersion assembly.

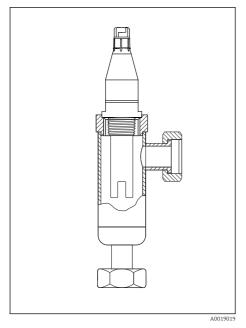


AD735550

■ 1 Installation in flow assembly CLA751

■ 2 Installation in flow assembly CLA752

Memosens CLS21E Installation

For the installation of sensors with a G1 thread in vessels: immersion assembly Dipfit CLA111 .

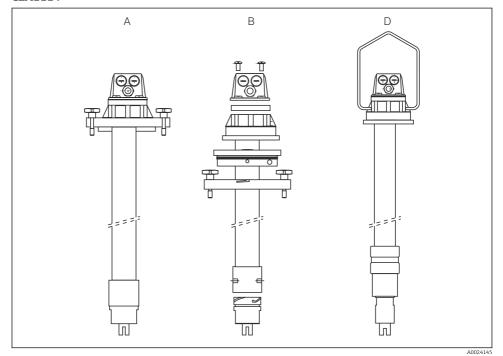


 $\blacksquare$  3 Installation in immersion assembly, mounting versions A, B and D

Electrical connection Memosens CLS21E

# 4.2 Mounting the sensor

1.

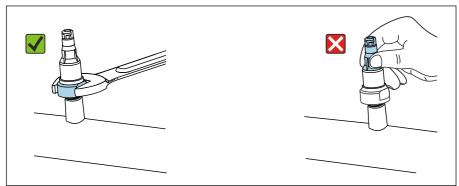

A0042909

## NOTICE

#### Incorrect mounting or disassembly

The head could become loose and fall off, resulting in total sensor failure!

- ▶ Only mount the sensor via the process connection.
- ► To do so, use a suitable tool, such as an open-ended wrench.

Install the sensor via the process connection or an assembly.

2. Ensure that the electrodes are fully immersed in the medium during measurement. Immersion depth: at least 35 mm (1.38").

#### 4.3 Post-installation check

- 1. Are the sensor and cable undamaged?
- 2. Is the sensor installed in the process connection and is not suspended from the cable?

# 5 Electrical connection

# **A** WARNING

#### Device is live!


Incorrect connection may result in injury or death!

- ► The electrical connection may be performed only by an electrical technician.
- ► The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

Memosens CLS21E Electrical connection

# 5.1 Connecting the sensor

The electrical connection of the sensor to the transmitter is established using the measuring cable CYK10.



A0024019

#### ■ 4 Measuring cable CYK10

#### NOTICE

#### Mechanical twist protection

If too much force is applied to the Memosens head, this can shear the connections and therefore destroy the sensor!

- There is no need to exert excessive force when connecting the sensor to the cable coupling. Proceed with care!
- ▶ If the Memosens coupling clearly will not close, check the coupling for dirt or mechanical damage, and make sure that you are turning it in the right direction. Pay attention to the lock symbol on the coupling!
- ▶ If necessary, use a different Memosens cable.

# 5.2 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

► Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example to covers being left off or cable (ends) that are loose or insufficiently secured.

#### 5.3 Post-connection check

# **WARNING**

#### Connection errors

The safety of people and of the measuring point is at risk! The manufacturer does not accept any responsibility for errors that result from failure to comply with the instructions in this manual.

▶ Put the measuring point into operation only if you can answer **yes** to **all** the following questions.

Product status and specifications

▶ Are the sensor and cable free from damage on the outside?

Commissioning Memosens CLS21E


#### Electrical connection

- ▶ Is the installed cable strain-relieved and not twisted?
- ► Is a sufficient length of the cable cores stripped, and are the cores correctly positioned in the terminal on the transmitter?
- ► Are all plug-in terminals on the transmitter securely engaged?
- ▶ Are all cable entries mounted on the transmitter, tightened and leak-tight?

# 6 Commissioning

Prior to initial commissioning, ensure that:

- The sensor is correctly installed
- The electrical connection is correct
- 1. Check the temperature compensation and damping settings on the transmitter.



## **A** WARNING

#### Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards!

- ▶ Before applying pressure to an assembly with cleaning system, ensure that the system has been connected correctly.
- ► If you cannot reliably establish the correct connection, do not install the assembly in the process.

If using an assembly with automatic cleaning function:

- 2. Check that the cleaning medium (water or air, for example) is connected correctly.
- 3. Following commissioning:

Maintain the sensor at regular intervals.

ightharpoonup This is the only way to ensure a reliable measurement.

# 7 Maintenance

# **A** CAUTION

#### Corrosive chemicals

Risk of chemical burns to the eyes and skin and risk of damage to clothing and equipment!

- ► It is absolutely essential to protect the eyes and hands properly when working with acids, alkalis and organic solvents!
- ► Wear protective goggles and safety gloves.
- ► Clean away splashes on clothes and other objects to prevent any damage.
- ► Comply with instructions in the safety data sheets for the chemicals used.

Memosens CLS21E Repair

# **A** WARNING

#### Thiocarbamide

Harmful if swallowed! Limited evidence of carcinogenicity! Possible risk of harm to the unborn child! Dangerous for the environment with long-term effects!

- ▶ Wear protective goggles, protective gloves and appropriate protective clothing.
- ▶ Avoid all contact with the eyes, mouth and skin.
- ▶ Avoid discharge into the environment.

Clean away fouling on the sensor as follows depending on the type of fouling:

- 1. Oily and greasy films:
  - Clean with fat solvent, e.g. alcohol, or hot water and agents containing surfactants (alkaline) (e.g. dishwashing detergent).
- 2. Lime and metal hydroxide buildup and low solubility (lyophobic) organic buildup: Dissolve buildup with diluted hydrochloric acid (3 %) and then rinse thoroughly with plenty of clear water.
- 3. Sulfidic buildup (from flue gas desulfurization or wastewater treatment plants):

  Use a mixture of hydrochloric acid (3 %) and thiocarbamide (commercially available) and then rinse thoroughly with plenty of clear water.
- 4. Buildup containing proteins (e.g. food industry):

  Use a mixture of hydrochloric acid (0.5 %) and pepsin (commercially available) and then rinse thoroughly with plenty of clear water.
- 5. Readily soluble biological buildup: Rinse with pressurized water.

After cleaning, rinse the sensor thoroughly with water.

# 8 Repair

#### 8.1 General information

The repair and conversion concept provides for the following:

- The product has a modular design
- Spare parts are grouped into kits which include the associated kit instructions
- Only use original spare parts from the manufacturer
- $\,\blacksquare\,$  Repairs are carried out by the manufacturer's Service Department or by trained users
- Certified devices can only be converted to other certified device versions by the manufacturer's Service Department or at the factory
- ullet Observe applicable standards, national regulations, Ex documentation (XA) and certificates
- 1. Carry out the repair according to the kit instructions.
- 2. Document the repair and conversion and enter, or have entered, in the Life Cycle Management tool (W@M).

Repair Memosens CLS21E

# 8.2 Spare parts

Device spare parts that are currently available for delivery can be found on the website:

www.endress.com/device-viewer

▶ Quote the serial number of the device when ordering spare parts.

#### 8.3 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

► Refer to the website www.endress.com/support/return-material for information on the procedure and conditions for returning devices.

# 8.4 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

Memosens CLS21E Accessories

# 9 Accessories

The following are the most important accessories available at the time this documentation was issued.

► For accessories not listed here, please contact your Service or Sales Center.

#### 9.1 Assemblies

#### Dipfit CLA111


- Immersion assembly for open and closed vessels with flange DN 100
- Product Configurator on the product page: www.products.endress.com/cla111



Technical Information TI00135C

#### Flow assembly CLA751

- For installing conductivity sensors with G1 thread (CLS12, CLS13, CLS21, CLS30)
- Inlet (below) and outlet (lateral) DN 20 with G1 thread adapter nut
- Stainless steel 1.4571 (AISI 316Ti)
- Max. temperature 160 °C (320 °F), max. pressure 12 bar (174 psi)
- Order No. 50004201

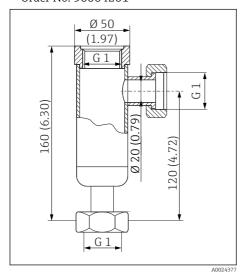


■ 5 Dimensions in mm (inch)

Accessories Memosens CLS21E

#### Flow assembly CLA752

- For installing conductivity sensors with G1 thread (CLS12, CLS13, CLS21, CLS30)
- Inlet (lateral) and outlet (lateral) DN 20 with G½ internal thread
- Polypropylene (PP)
- Max. temperature 90 °C (194 °F), max. pressure 6 bar (87 psi)
- Order No. 50033772

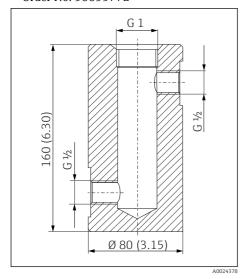

■ 6 Dimensions in mm (inch)

# 9.2 Measuring cable

#### Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10



Technical Information TI00118C

#### Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

Memosens CLS21E Technical data

#### 9.3 Calibration solutions

#### Conductivity calibration solutions CLY11

Precision solutions referenced to SRM (Standard Reference Material) by NIST for qualified calibration of conductivity measuring systems in accordance with ISO 9000

- CLY11-A, 74 µS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz) Order No. 50081902
- CLY11-B, 149.6 μS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
   Order No. 50081903
- CLY11-C, 1.406 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
   Order No. 50081904
- CLY11-D, 12.64 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
   Order No. 50081905



Technical Information TI00162C

## 10 Technical data

## **10.1** Input

#### 10.1.1 Measured variables

- Conductivity
- Temperature

#### 10.1.2 Measuring ranges

Conductivity 1)

 $10 \mu S/cm$  to 20 mS/cm

1) In relation to water at 25 °C (77 °F)

**Temperature** 

-20 to 135 °C (-4 to 275 °F)

#### 10.1.3 Cell constant

 $k = 1.0 \text{ cm}^{-1}$ . nominal

#### **10.1.4** Temperature compensation

Pt1000 (Class A according to IEC 60751)

#### 10.2 Performance characteristics

#### 10.2.1 Uncertainty of measurement

Each individual sensor is factory-measured in a solution with approx. 5 mS/cm using a reference measuring system traceable to NIST or PTB. The exact cell constant is entered into

Technical data Memosens CLS21E

the manufacturer inspection certificate supplied. The uncertainty of measurement in determining the cell constant is 1.0 %.

### 10.2.2 Response time

 $\begin{tabular}{ll} \textbf{Conductivity} & t_{95} \le 2 \ s \\ \textbf{Temperature} & t_{90} \le 30 \ s^{2)} \\ \end{tabular}$ 

- 1) DIN VDI/VDE 3522-2 ( 0.3 m/s laminar)
- 2) With temperature prediction activated as standard

#### 10.2.3 Measured error

**Conductivity**  $\leq$  5 % of reading, in specified measuring range  $\leq$  2.5 K, in measuring range -20 to 100 °C (-4 to

212 °F)

 $\leq$  3.5 K, in measuring range 100 to 135 °C (212 to

275°F)

#### 10.2.4 Repeatability

**Conductivity**  $\leq 0.2 \%$  of reading, in specified measuring range

**Temperature**  $\leq 0.05 \text{ K}$ 

#### 10.3 Environment

#### 10.3.1 Ambient temperature

-20 to 60 °C (-4 to 140 °F)

#### 10.3.2 Storage temperature

 $-25 \text{ to } +80 \,^{\circ}\text{C} \text{ (-10 to } +180 \,^{\circ}\text{F)}$ 

#### 10.3.3 Degree of protection

IP 68 / NEMA type 6P (1.9 m water column, 20 °C, 24 h)

#### 10.4 Process

#### 10.4.1 Process temperature


-20 to 135 °C (-4 to 275 °F) at 3.5 bar (50 psi) absolute

## 10.4.2 Process pressure

17 bar (247 psi) absolute, at 20 °C (68 °F)

Memosens CLS21E Technical data

#### 10.4.3 Temperature/pressure ratings

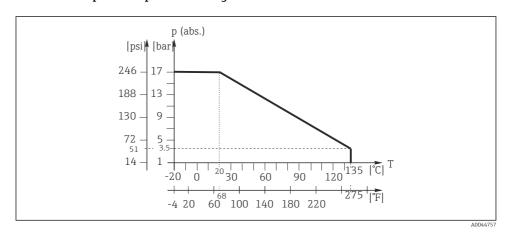

Mechanical pressure-temperature resistance

#### 10.5 Mechanical construction

#### 10.5.1 Weight

Approx. 0.3 kg (0.66 lbs) depending on version

#### 10.5.2 Materials (in contact with medium)

Electrodes Graphite

Sensor shaft Polyethersulfone (PES-GF20)

Thermal conductivity socket for Titanium 3.7035

temperature probe

#### 10.5.3 Materials (not in contact with medium)

#### Information according to REACH Regulation (EC) 1907/2006 Art. 33/1)

An internal connector contains the SVHC substance lead (CAS number 7439-92-1) with over 0.1% (w/w).

The product does not present a hazard if it is used as designated.

#### 10.5.4 Process connection

G1 thread NPT 1" thread

Index Memosens CLS21E

# Index

A	0
Ambient temperature	Operational safety 5
Approvals	_
Marine	P
C	Performance characteristics 17
C	Pressure/temperature ratings
Cell constant	Process
Check	Process connection
Connection	Process pressure
Installation 10	Process temperature
Connection	Product safety 5
Check	R
Ensuring the degree of protection 11	Repair
D	Repeatability
Declaration of Conformity	Response time
Degree of protection	Return
Ensuring	neturn
Technical data	S
Designated use 4	Safety
Disposal	Operation
Documentation	Product 5
	Workplace safety 4
E	Safety instructions 4
Electrical connection	Scope of delivery 6
EN 10204 3.1	Sensor
Environment	Cleaning
ī	Connecting
-	Mounting
Identifying the product 6	Spare parts
Incoming acceptance	Storage temperature
Inspection certificate	Symbols
Check	Т
Sensor	Technical data
Schsol	Environment
M	Input
Manufacturer inspection certificate 7	Mechanical construction 19
Marine	Performance characteristics 17
Materials	Process
Measured error	Temperature compensation
Measured variables	Temperature/pressure ratings 19
Measuring ranges	
NT.	U
N	Uncertainty of measurement 17
Nameplate 6	

20

Memosens CLS21E Index

Use	_
W	
Warnings	3
Weight	ç
Workplace safety	4





71515067

中国E+H技术销售 www.ainstru.com

电话: 18923830905 邮箱: sales@ainstru.com

