

Operating Instructions

Memosens CLS82D

Hygienic conductivity sensors
Digital with Memosens technology
Cell constant $k = 0.57 \text{ cm}^{-1}$

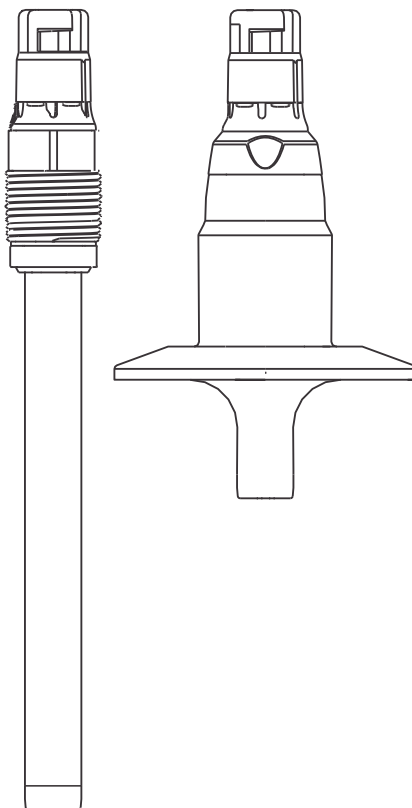






Table of contents








1	About this document	3	10	Technical data	22
1.1	Warnings	3	10.1	Input	22
1.2	Symbols	3	10.2	Performance characteristics	22
2	Basic safety instructions	4	10.3	Environment	23
2.1	Requirements for personnel	4	10.4	Process	23
2.2	Designated use	4	10.5	Mechanical construction	24
2.3	Workplace safety	4	11	EU Declaration of	
2.4	Operational safety	5		Conformity	25
2.5	Product safety	5	Index		26
2.6	Electrical equipment in hazardous areas	5			
3	Incoming acceptance and product identification	7			
3.1	Incoming acceptance	7			
3.2	Product identification	8			
3.3	Scope of delivery	9			
3.4	Certificates and approvals	10			
4	Installation	11			
4.1	Installation conditions	11			
4.2	Post-installation check	13			
5	Electrical connection	14			
5.1	Quick wiring guide	15			
5.2	Connecting the sensor	16			
5.3	Ensuring the degree of protection	16			
5.4	Post-connection check	16			
6	Commissioning	17			
7	Maintenance	17			
7.1	Cleaning the sensor	17			
7.2	Calibrating the sensor	18			
8	Repair	18			
8.1	Return	18			
8.2	Disposal	19			
9	Accessories	19			
9.1	Seals	19			
9.2	Welding socket	20			
9.3	Connection	20			
9.4	Calibration solutions	21			
9.5	Calibration set	21			

1 About this document

1.1 Warnings

Structure of information	Meaning
 Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.
 Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.
 Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.
 Cause/situation If necessary, Consequences of non-compliance (if applicable) ► Action/note	This symbol alerts you to situations which may result in damage to property.

1.2 Symbols

Symbol	Meaning
	Additional information, tips
	Permitted or recommended
	Not permitted or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step

2 Basic safety instructions

2.1 Requirements for personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.



Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

2.2 Designated use

The Memosens CLS82D conductivity sensor is used to measure low to high conductivity of liquids in applications with hygienic requirements.

The broad measuring range means the device can be used in a large number of applications, e.g. :

- Phase separation of water/product mixtures
- Phase separation of product/product mixtures
- Monitoring of rinsing processes
- Fermentations
- Monitoring of water bodies
- Concentration measurement of bases and acids (consider the material resistance properties!)
- Monitoring product quality

The digital sensor is used with the Liquiline CM44x or Liquiline CM42.

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

1. Verify that all connections are correct.
2. Ensure that electrical cables and hose connections are undamaged.
3. Do not operate damaged products, and protect them against unintentional operation.
4. Label damaged products as defective.

During operation:

- ▶ If faults cannot be rectified:
products must be taken out of service and protected against unintentional operation.

2.5 Product safety

2.6 Electrical equipment in hazardous areas

Sensors with ATEX and IECEx approval (CLS82D-BA***, CLS82D-IA***)

- Sensor CLS82D is suitable for use in potentially explosive atmospheres in accordance with EC Type Examination Certificate BVS 04 ATEX E 121. The corresponding EC Declaration of Conformity is part of this document.
- The sensor may be used in an environment specified as Ex Zone 0 (1G).
- The sensor must be connected and operated in accordance with the accompanying Technical Information and Operating Instructions for the transmitter to be connected. All sensor operating data must be observed. Ensure correct installation to maintain housing protection type (IP68). Use original seal. Fit cable entry properly.
- Compliance with the specified ambient and medium temperature ranges is a prerequisite for safe use of the device!
- The conductivity sensor CLS82D may only be connected via measuring cable CYK10-G to the certified intrinsically safe digital Memosens sensor output module FSDG1 of the Liquiline M CM42 transmitter in accordance with EC Type Examination Certificate TÜV 13 ATEX 7459 X and IECEx TUR 11.0007X.
- The electrical connection must be made according to the wiring diagram of the transmitter.
- Metallic process connection parts must be mounted at the mounting location electrostatically conductive ($< 1 \text{ M}\Omega$).
- Non-metallic process connections must be protected against electrostatic charging (also when used in Ex Zone 1 (2G)).
- Measuring cable CYK10-G and its terminal head must be protected against electrostatic charging if it is run through Zone 0.
- The maximum permitted cable length is 100 m.
- Ex versions of digital sensors with Memosens technology are indicated by an orange-red ring.
- Full compliance with regulations for electrical systems in hazardous locations (EN/IEC 60079-14) is mandatory when using the devices and sensors.

Sensors with FM and CSA approval (CLS82D-FB***, CLS82D-C2***)

- Pay attention to the documentation and control drawings for the transmitter.

Sensors with NEPSI approval (CLS82D-NA***)

- Pay attention to the information on the NEPSI certificates.
 - ↳ You can download these certificates from the product page: www.endress.com/cls82d.

Sensors with TIIS approval (CLS82D-TA***)

- Use sensors with TIIS approval only in Zone 1 (2G) environment.

2.6.1 Temperature classes

Sensor CLS82D is suitable for use in the following ambient temperature and process temperature ranges:

ATEX II 1G Ex ia IIC T3/T4/T6 Ga

Type				Medium temp. T _a for temperature class (Tn)
CLS82D	-	BA	***	-20 °C ≤ T _a ≤ +140 °C (T3) -20 °C ≤ T _a ≤ +115 °C (T4) -20 °C ≤ T _a ≤ +65 °C (T6)

NEPSI Ex ia IIC T3/T4/T6 Ga

Type				Medium temp. T _a for temperature class (Tn)
CLS82D	-	NA	***	-20 °C ≤ T _a ≤ +140 °C (T3) -20 °C ≤ T _a ≤ +115 °C (T4) -20 °C ≤ T _a ≤ +65 °C (T6)

IECEx Ex ia IIC T3/T4/T6 Ga

Type				Medium temp. T _a for temperature class (Tn)
CLS82D	-	IA	***	-20 °C ≤ T _a ≤ +140 °C (T3) -20 °C ≤ T _a ≤ +115 °C (T4) -20 °C ≤ T _a ≤ +65 °C (T6)

CSA IS/NI Cl.1 Div.1&2 Grp.:A-D

Type				Medium temp. T _a for temperature class (Tn)
CLS82D	-	C2	***	-20 °C ≤ T _a ≤ +140 °C (T3) -20 °C ≤ T _a ≤ +115 °C (T4) -20 °C ≤ T _a ≤ +65 °C (T6)

FM IS/NI Cl.1 Div.1&2 Grp.:A-D

Type				Medium temp. T _a for temperature class (Tn)
CLS82D	-	FB	***	-20 °C ≤ Ta ≤ +140 °C (T3) -20 °C ≤ Ta ≤ +115 °C (T4) -20 °C ≤ Ta ≤ +65 °C (T6)

TIIS Ex ib T4

Type				Medium temp. T _a for temperature class (Tn)
CLS82D	-	TA	***	-20 °C ≤ Ta ≤ +115 °C (T4)

The plant operator must take appropriate installation measures to ensure compliance with these temperature values. If the specified medium temperatures are complied with, temperatures that are not permitted for the respective temperature class will not occur on the equipment.

3 Incoming acceptance and product identification

3.1 Incoming acceptance

1. Verify that the packaging is undamaged.
 - ↳ Notify the supplier of any damage to the packaging.
Keep the damaged packaging until the issue has been resolved.
2. Verify that the contents are undamaged.
 - ↳ Notify the supplier of any damage to the delivery contents.
Keep the damaged goods until the issue has been resolved.
3. Check that the delivery is complete and nothing is missing.
 - ↳ Compare the shipping documents with your order.
4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - ↳ The original packaging offers the best protection.
Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

3.2 Product identification

3.2.1 Type code for versions with explosion protection

ATEX II 1G Ex ia IIC T3/T4/T6 Ga

Type		Approval	Version
CLS82D	-	BA	***
		ATEX	Process connections, materials not Ex-relevant

NEPSI Ex ia IIC T3/T4/T6 Ga

Type		Approval	Version
CLS82D	-	NA	***
		NEPSI	Process connections, materials not Ex-relevant

IECEX Ex ia IIC T3/T4/T6 Ga

Type		Approval	Version
CLS82D	-	IA	***
		IECEX	Process connections, materials not Ex-relevant

CSA IS/NI Cl.1 Div.1&2 Grp.:A-D

Type		Approval	Version
CLS82D	-	C2	***
		CSA	Process connections, materials not Ex-relevant

FM IS/NI Cl.1 Div.1&2 Grp.:A-D

Type		Approval	Version
CLS82D	-	FB	***
		FM	Process connections, materials not Ex-relevant

TIIS Ex ib T4

Type		Approval	Version
CLS82D	-	TA	***
		TIIS	Process connections, materials not Ex-relevant

3.2.2 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
 - Order code
 - Serial number
 - Safety information and warnings
 - Cell constant (nominal value)
 - Ex labeling on hazardous area versions
- Compare the information on the nameplate with the order.

3.2.3 Product identification

Product page

www.endress.com/cls82d

Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

1. Go to www.endress.com.
2. Call up the site search (magnifying glass).
3. Enter a valid serial number.
4. Search.
 - ↳ The product structure is displayed in a popup window.
5. Click on the product image in the popup window.
 - ↳ A new window (**Device Viewer**) opens. All of the information relating to your device is displayed in this window as well as the product documentation.

Manufacturer's address

Endress+Hauser Conducta GmbH+Co. KG
Dieselstraße 24
D-70839 Gerlingen

3.3 Scope of delivery

The scope of delivery includes:

- Sensor in the version ordered
- Operating Instructions

3.4 Certificates and approvals

3.4.1 C€ mark

Declaration of Conformity

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the C€ mark.

3.4.2 Hazardous area approvals

Ex approvals in conjunction with the Liquiline CM42 transmitter, depending on the version:

- ATEX II 1G Ex ia IIC T3/T4/T6 Ga
- CSA C/US IS NI Cl. I Div.1&2 Gr.A-D
- FM IS/NI Cl.1 Div.1&2 Grp.:A-D
- NEPSI Ex ia IIC T3/T4/T6 Ga
- TIIS Ex ib IIC T4



All of the Ex versions listed here are identified by an orange-red ring on the plug-in head.

3.4.3 EAC version

The product has been certified according to guidelines TP TC 004/2011 and TP TC 020/2011 which apply in the European Economic Area (EEA). The EAC conformity mark is affixed to the product.

3.4.4 Inspection certificate in accordance with EN 10204 3.1

A test certificate 3.1 in accordance with EN 10204 is supplied depending on the version (→ Product Configurator on the product page).

3.4.5 Ex certification body

DEKRA EXAM GmbH

Bochum

3.4.6 Marine approvals

A selection of the devices and sensors have type approval for marine applications, issued by the following classification societies: ABS (American Bureau of Shipping), BV (Bureau Veritas), DNV-GL (Det Norske Veritas-Germanischer Lloyd) and LR (Lloyd's Register). Details of the order codes of the approved devices and sensors, and the installation and ambient conditions, are provided in the relevant certificates for marine applications on the product page on the Internet.


4 Installation

4.1 Installation conditions

► Prior to installation:

Remove the black protective cap from the sensor element.

Symmetrical installation is recommended in order to guarantee linearity. The distance to the side walls and opposite walls must be at least 15 mm.

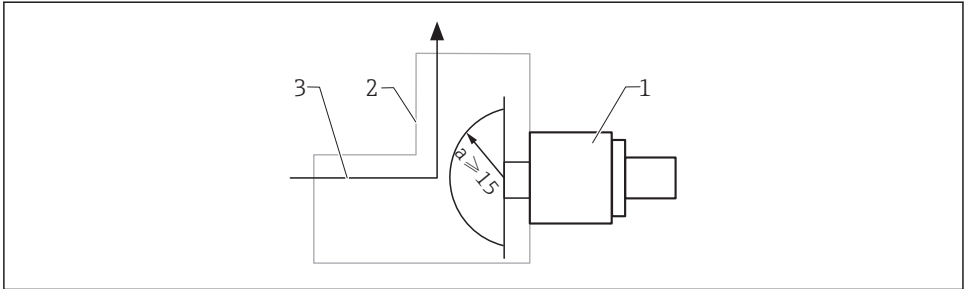

A0024621

1 Minimum distance between pipe and end of the measuring cell

1 Sensor

2 Pipe


3 Direction of flow

The ionic current in the liquid is affected by the walls in confined installation conditions. This effect is compensated by what is referred to as the installation factor. The installation factor can be entered in the transmitter for the measurement or the cell constant is corrected by multiplying by the installation factor.

The value of the installation factor depends on the diameter and the conductivity of the pipe nozzle as well as the sensor's distance to the wall. The installation factor can be disregarded ($f = 1.00$) if the distance to the wall is sufficient ($a > 15$ mm). If the distance to the wall is smaller, the installation factor increases for electrically insulating pipes ($f > 1$) and decreases for electrically conductive pipes ($f < 1$). The installation factor can be determined using calibration solutions.

► Ensure that the electrodes are fully immersed in the medium during measurement. Ideally, medium should flow to the measuring cell from the front.


↳ Any other installation position can cause air pockets to occur or the buildup of solid impurities.

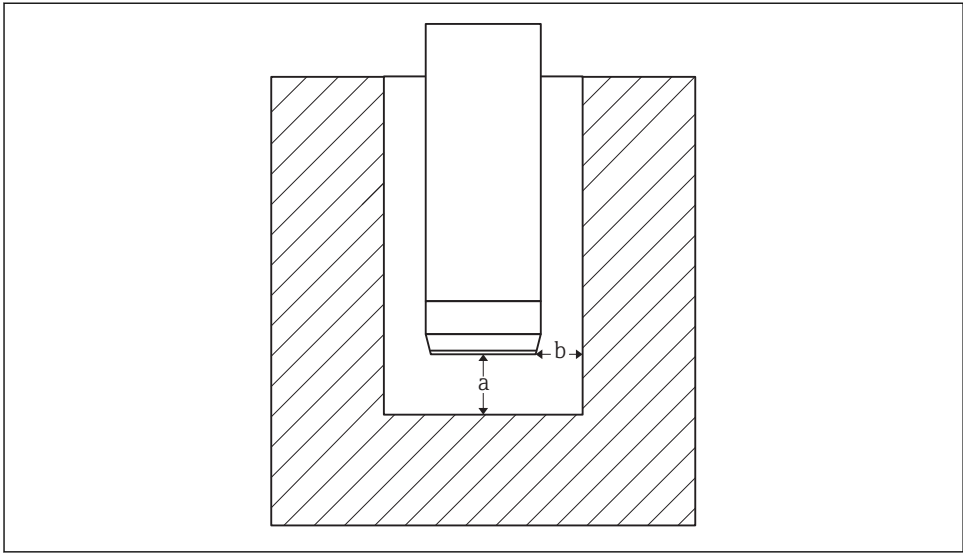

A0024626

2 Schematic drawing of the sensor in confined installation conditions


- a Wall distance
- b Gap width

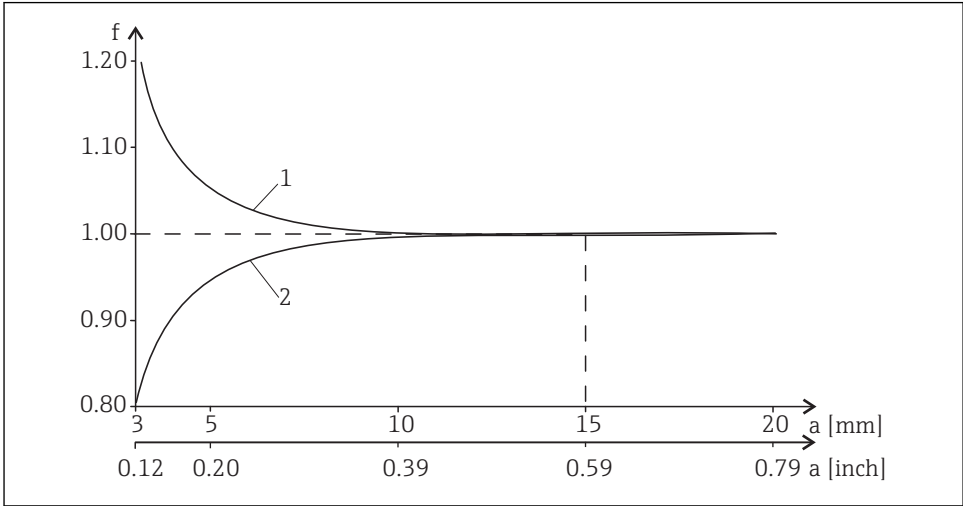

A0034378

3 Relationship between installation factor f and wall distance a

- 1 Electrically insulating pipe wall
- 2 Electrically conductive pipe wall

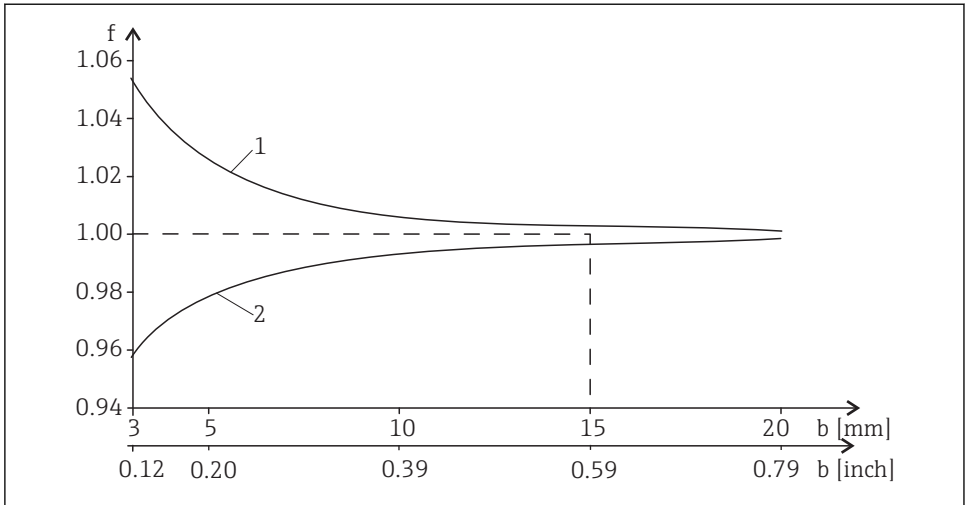

A0024616

4 Relationship between installation factor f and gap width b

- 1 Electrically insulating pipe wall
- 2 Electrically conductive pipe wall

4.1.1 Hygienic requirements

- ▶ The use of an EHEDG-certified assembly is a prerequisite for the easy-to-clean installation of a 12-mm sensor in accordance with EHEDG requirements.
- ▶ Furthermore, the instructions regarding the hygienic installation and operation of the assembly in the relevant Operating Instructions must be adhered to.

For 3-A-compliant installation, please observe the following:

- ▶ After the device has been mounted, hygienic integrity must be guaranteed.
- ▶ 3-A-compliant process connections must be used.

4.1.2 Installation factors for assemblies

i For flow assemblies or assemblies with a basket protector where it is not possible to maintain a distance $a > 15$ mm (\rightarrow 1, 11) to the sensor element, it is advisable to determine the installation factor by calibrating in the assembly used in order to guarantee the specified sensor measured error.

4.2 Post-installation check

1. Are the sensor and cable undamaged?
2. Is the sensor installed in the process connection and is not suspended from the cable?

5 Electrical connection


WARNING

Device is live!

Incorrect connection may result in injury or death!

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

5.1 Quick wiring guide

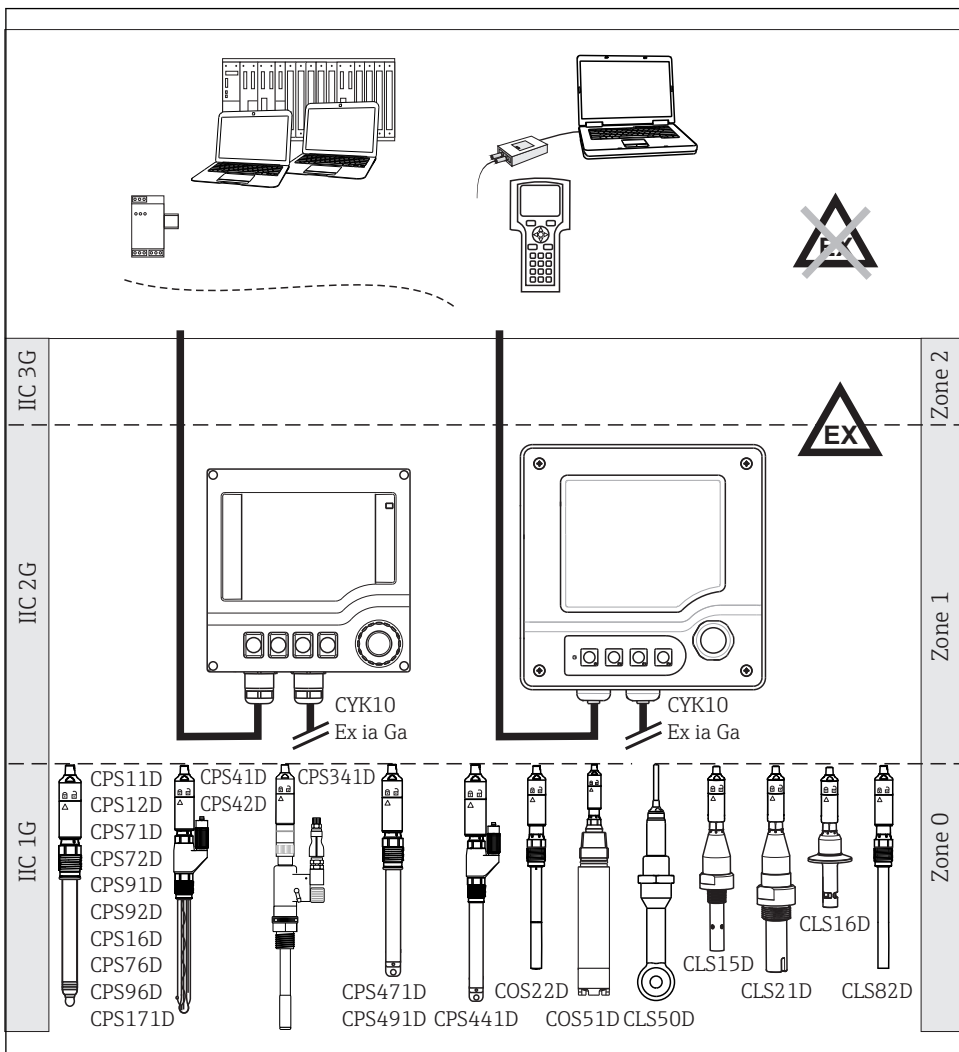


A0031174

5 Electrical connection in hazardous environment

5.2 Connecting the sensor

The sensor is connected to the transmitter via the Memosens data cable CYK10.

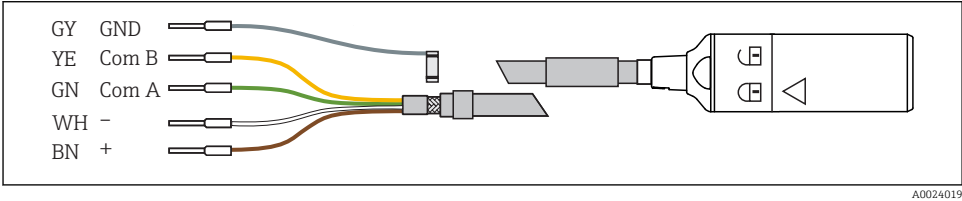

6 Memosens data cable CYK10

5.3 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

- ▶ Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example to covers being left off or cable (ends) that are loose or insufficiently secured.

5.4 Post-connection check

Device condition and specifications	Action
Are the sensor, assembly or cables free from damage on the outside?	<ul style="list-style-type: none">▶ Perform a visual inspection.
Electrical connection	Action
Are the mounted cables strain-relieved and not twisted?	<ul style="list-style-type: none">▶ Perform a visual inspection.▶ Untwist the cables.
Is a sufficient length of the cable cores stripped, and are the cores positioned in the terminal correctly?	<ul style="list-style-type: none">▶ Perform a visual inspection.▶ Pull gently to check they are seated correctly.
Are all the screw terminals properly tightened?	<ul style="list-style-type: none">▶ Tighten the screw terminals.
Are all cable entries mounted, tightened and leak-tight?	<ul style="list-style-type: none">▶ Perform a visual inspection.
Are all cable entries installed downwards or mounted laterally?	<p>In the case of lateral cable entries:</p> <ul style="list-style-type: none">▶ Point cable loops downward so that water can drip off.

6 Commissioning

Prior to initial commissioning, ensure that:

- The sensor is correctly installed
- The electrical connection is correct

1. Check the temperature compensation and damping settings on the transmitter.



Operating Instructions of the transmitter used, e.g. BA01245C if the Liquiline CM44x or CM44xR is used.

WARNING

Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards!

- ▶ Before applying pressure to an assembly with cleaning system, ensure that the system has been connected correctly.
- ▶ If you cannot reliably establish the correct connection, do not install the assembly in the process.

If using an assembly with automatic cleaning function:

2. Check that the cleaning medium (water or air, for example) is connected correctly.

3. Following commissioning:

Maintain the sensor at regular intervals.

- ↳ This is the only way to ensure a reliable measurement.

7 Maintenance

7.1 Cleaning the sensor

CAUTION

Corrosive chemicals

Risk of chemical burns to the eyes and skin and risk of damage to clothing and equipment!

- ▶ It is absolutely essential to protect the eyes and hands properly when working with acids, alkalis and organic solvents!
- ▶ Wear protective goggles and safety gloves.
- ▶ Clean away splashes on clothes and other objects to prevent any damage.
- ▶ Comply with instructions in the safety data sheets for the chemicals used.

⚠ WARNING**Thiocarbamide**

Harmful if swallowed! Limited evidence of carcinogenicity! Possible risk of harm to the unborn child! Dangerous for the environment with long-term effects!

- ▶ Wear protective goggles, protective gloves and appropriate protective clothing.
- ▶ Avoid all contact with the eyes, mouth and skin.
- ▶ Avoid discharge into the environment.

Clean away fouling on the sensor as follows depending on the type of fouling:

1. Oily and greasy films:

Clean with fat solvent, e.g. alcohol, or hot water and agents containing surfactants (alkaline) (e.g. dishwashing detergent).

2. Lime and metal hydroxide buildup and low solubility (lyophobic) organic buildup:

Dissolve buildup with diluted hydrochloric acid (3 %) and then rinse thoroughly with plenty of clear water.

3. Sulfidic buildup (from flue gas desulfurization or wastewater treatment plants):

Use a mixture of hydrochloric acid (3 %) and thiocarbamide (commercially available) and then rinse thoroughly with plenty of clear water.

4. Buildup containing proteins (e.g. food industry):

Use a mixture of hydrochloric acid (0.5 %) and pepsin (commercially available) and then rinse thoroughly with plenty of clear water.

5. Readily soluble biological buildup:

Rinse with pressurized water.

After cleaning, rinse the sensor thoroughly with water.

7.2 Calibrating the sensor

▶ Wall distance:

When calibrating, ensure that there is a minimum distance of 15 mm to the base and walls of the calibration vessel.

8 Repair

8.1 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

- ▶ Refer to the website www.endress.com/support/return-material for information on the procedure and conditions for returning devices.

8.2 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

9 Accessories

9.1 Seals



Only for CLS82D-NA*¹⁾ and CLS82D-**NB*²⁾:**

- EPDM seals for CLS82D (x 2; FDA USP Class VI); Order No. 71307106
- FKM (VITON) seals for CLS82D (x 2; FDA USP Class VI); order no. 71307105
- Silicone seals for CLS82D (x 2, FDA USP Class VI); Order No. 71307107

1) Process connection: DN25 standard

2) Process connection: DN25 B. Braun

9.2 Welding socket

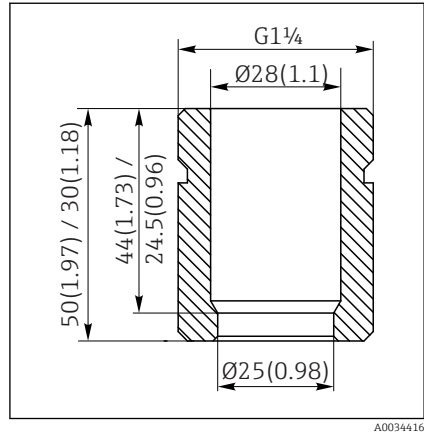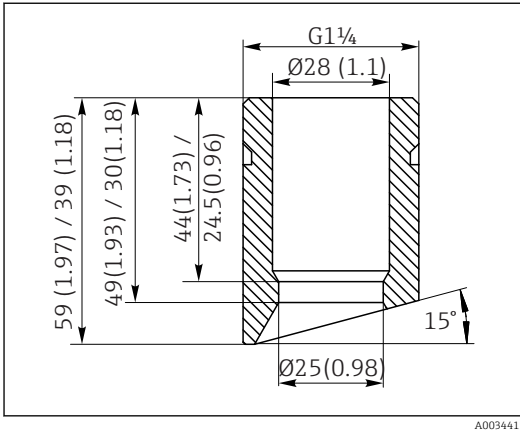

Only for CLS82D-**NA*

- Safety welding socket DN25, straight, stainless steel 1.4435, L=30; Order No. 51508051
- Safety welding socket DN25, angled, stainless steel 1.4435, L=30/40; Order No. 51508052

Only for CLS82D-**NB*

- Safety welding socket DN25, straight, stainless steel 1.4435, L=50; Order No. 51508049
- Safety welding socket DN25, angled, stainless steel 1.4435, L=50/60; Order No. 51508050



Existing standard welding sockets (for CPA440 / CPA441 / CPA460), Order Nos. 50005192 and 50028446, are also suitable for sensor CLS82D.

9.3 Connection

Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10



Technical Information TI00118C

Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

9.4 Calibration solutions

Conductivity calibration solutions CLY11

Precision solutions referenced to SRM (Standard Reference Material) by NIST for qualified calibration of conductivity measuring systems in accordance with ISO 9000

- CLY11-A, 74 $\mu\text{S}/\text{cm}$ (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081902
- CLY11-B, 149.6 $\mu\text{S}/\text{cm}$ (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081903
- CLY11-C, 1.406 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081904
- CLY11-D, 12.64 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081905
- CLY11-E, 107.00 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081906



Technical Information TI00162C

9.5 Calibration set

Conducual CLY421

- Conductivity calibration set (case) for ultrapure water applications
- Complete, factory-calibrated measuring system with certificate, traceable to SRM by NIST and PTB, for comparison measurement in ultrapure water up to max. 20 $\mu\text{S}/\text{cm}$
- Product Configurator on the product page: www.endress.com/cly421



Technical Information TI00496C/07/EN

Recalibration

- The conductivity calibration set must be calibrated regularly onsite at the manufacturer's depending on the frequency of use and operating conditions.
- Recommended period: 1 year

10 Technical data

10.1 Input

10.1.1 Measured variables

- Conductivity
- Temperature

10.1.2 Measuring ranges

Conductivity

1 $\mu\text{S}/\text{cm}$ to 500 mS/cm

Temperature

-5 to 120 °C (23 to 248 °F)

10.1.3 Cell constant

$k = 0.57 \text{ cm}^{-1}$

10.1.4 Temperature compensation

Pt1000 (Class A according to IEC 60751)

10.2 Performance characteristics

10.2.1 Uncertainty of measurement

Each individual sensor is factory-measured in a solution of approx. 50 $\mu\text{S}/\text{cm}$ using a reference measuring system traceable to NIST or PTB. The exact cell constant is entered into the quality certificate supplied. The uncertainty of measurement in determining the cell constant is 1.0 %.

10.2.2 Conductivity response time

$t_{90} \leq 3 \text{ s}$

10.2.3 Temperature response time

$t_{90} \leq 25 \text{ s}$

10.2.4 Maximum measured error

$\leq 4 \text{ \%}$ of reading

10.2.5 Repeatability

0.2% of reading

10.3 Environment

10.3.1 Ambient temperature

-20 to 60 °C (-4 to 140 °F)

10.3.2 Storage temperature

-25 to +80 °C (-10 to +180 °F)

10.3.3 Humidity

5 to 95 %

10.3.4 Degree of protection

IP 68 / NEMA type 6P (1 m water column, 25 °C, 168 h)

10.4 Process

10.4.1 Process temperature

Normal operation: -5 to 120 °C (23 to 248 °F)


Sterilization (max. 45 min.): Max. 140 °C (284 °F) at 6 bar (87 psi)

10.4.2 Process pressure

17 bar (247 psi) at 20 °C (68 °F)

9 bar (131 psi) at 120 °C (248 °F)

10.4.3 Temperature/pressure ratings

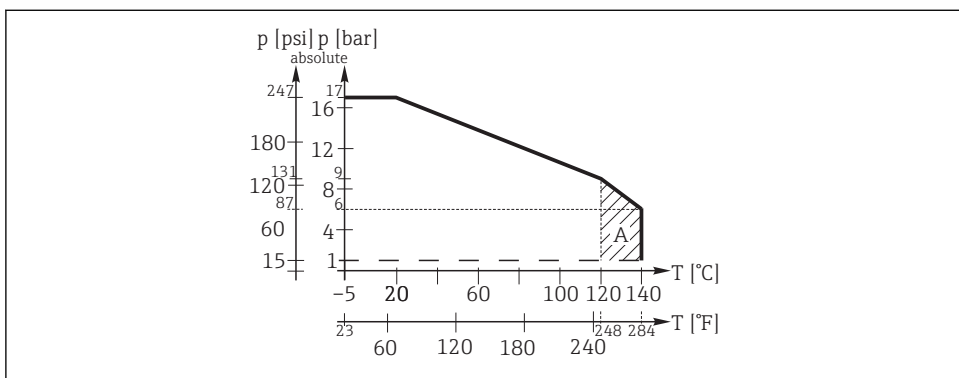

A0034375-EN

 7 Pressure-temperature ratings

A Can be sterilized for a short time (45 min.)

10.5 Mechanical construction

10.5.1 Weight

Approx. 0.06 to 0.950 kg (0.13 to 2.09 lbs) depending on the version

10.5.2 Materials in contact with the medium

Sensor element: Platinum and ceramic (zirconium oxide)

Process connection: Stainless steel 1.4435 (AISI 316L)

*Only for CLS82D-**NA*¹⁾ and CLS82D-**NB*²⁾.*

Seal: EPDM

1) 1. Connection: DN25 standard

2) 2. Connection: DN25 brown

10.5.3 Surface roughness

$R_a < 0.38 \mu\text{m}$

11 EU Declaration of Conformity

EU-Konformitätserklärung EU-Declaration of Conformity Déclaration UE de Conformité		Endress+Hauser  People for Process Automation														
																
Company	Endress+Hauser Conducta GmbH+Co. KG Dieselstraße 24, 70839 Gerlingen, Germany erklärt als Hersteller in alleiniger Verantwortung, dass das Produkt declares as manufacturer under sole responsibility, that the product déclare sous sa seule responsabilité en qualité de fabricant que le produit															
Product	Memosens CLS82D-BA**A															
Regulations	den folgenden Europäischen Richtlinien entspricht: conforms to following European Directives: est conforme aux prescription des Directives Européennes suivantes : EMC 2014/30/EU (L96/79) ATEX 2014/34/EU (L96/309)															
Standards	angewandte harmonisierte Normen oder normative Dokumente: applied harmonized standards or normative documents: normes harmonisées ou documents normatifs appliqués : <table border="0"> <tr> <td>EN 61326-1</td> <td>(2013)</td> <td>EN 60079-0</td> <td>(2012)</td> <td rowspan="3">+A11:2013</td> </tr> <tr> <td>EN 61326-2-3</td> <td>(2013)</td> <td>EN 60079-11</td> <td>(2012)</td> </tr> <tr> <td>EN 61326-2-5</td> <td>(2013)</td> <td>EN 60079-26</td> <td>(2015)</td> </tr> </table>			EN 61326-1	(2013)	EN 60079-0	(2012)	+A11:2013	EN 61326-2-3	(2013)	EN 60079-11	(2012)	EN 61326-2-5	(2013)	EN 60079-26	(2015)
EN 61326-1	(2013)	EN 60079-0	(2012)	+A11:2013												
EN 61326-2-3	(2013)	EN 60079-11	(2012)													
EN 61326-2-5	(2013)	EN 60079-26	(2015)													
Certification	<table border="0"> <tr> <td>EG-Baumusterprüfbescheinigung Nr.</td> <td>BVS 04 ATEX E 121 X</td> </tr> <tr> <td>EC-Type Examination Certificate No.</td> <td></td> </tr> <tr> <td>Numéro de l'attestation d'examen CE de type</td> <td></td> </tr> <tr> <td>Ausgestellt von/issued by/délivré par</td> <td>DEKRA EXAM GmbH (0158)</td> </tr> <tr> <td>Qualitätssicherung/Quality assurance/Système d'assurance</td> <td>DEKRA EXAM GmbH (0158)</td> </tr> <tr> <td>qualité</td> <td></td> </tr> </table> Gerlingen, 20. April 2016 Endress+Hauser Conducta GmbH+Co. KG			EG-Baumusterprüfbescheinigung Nr.	BVS 04 ATEX E 121 X	EC-Type Examination Certificate No.		Numéro de l'attestation d'examen CE de type		Ausgestellt von/issued by/délivré par	DEKRA EXAM GmbH (0158)	Qualitätssicherung/Quality assurance/Système d'assurance	DEKRA EXAM GmbH (0158)	qualité		
EG-Baumusterprüfbescheinigung Nr.	BVS 04 ATEX E 121 X															
EC-Type Examination Certificate No.																
Numéro de l'attestation d'examen CE de type																
Ausgestellt von/issued by/délivré par	DEKRA EXAM GmbH (0158)															
Qualitätssicherung/Quality assurance/Système d'assurance	DEKRA EXAM GmbH (0158)															
qualité																
	<table border="0"> <tr> <td style="text-align: center;">  i. V. Jörg Martin Müller Technology </td> <td style="text-align: center;">  i. V. Sven-Matthias Scheibe Technology Certifications and Approvals </td> </tr> </table>			 i. V. Jörg Martin Müller Technology	 i. V. Sven-Matthias Scheibe Technology Certifications and Approvals											
 i. V. Jörg Martin Müller Technology	 i. V. Sven-Matthias Scheibe Technology Certifications and Approvals															
EC_00383_01.16																

Index

A

Ambient temperature	23
Approvals	
Marine	10

C

Cell constant	22
Certification body	10
Check	
Connection	16
Installation	13
Connection	
Check	16
Ensuring the degree of protection	16
Connection conditions	15

D

Declaration of Conformity	10, 25
Degree of protection	
Ensuring	16
Technical data	23
Designated use	4
Disposal	19

E

Electrical connection	14
EN 10204 3.1	10
Environment	23
EU Declaration of Conformity	25

H

Hazardous area approvals	10
Hazardous areas	5

I

Incoming acceptance	7
Inspection certificate	10
Installation	
Check	13
Installation factor	13

M

Marine	10
Materials	24
Maximum measured error	22
Measured variables	22

Measuring ranges	22
----------------------------	----

N

Nameplate	9
---------------------	---

O

Operational safety	5
------------------------------	---

P

Performance characteristics	22
Pressure/temperature ratings	23
Process	23
Process pressure	23
Process temperature	23
Product identification	9
Product safety	5

R

Repair	18
Repeatability	22
Return	18

S

Safety	
Electrical equipment in hazardous areas	5
Operation	5
Product	5
Workplace safety	4
Safety instructions	4
Scope of delivery	9
Sensor	
Calibration	18
Cleaning	17
Connecting	16
Storage temperature	23
Surface roughness	24
Symbols	3

T

Technical data	
Environment	23
Input	22
Mechanical construction	24
Performance characteristics	22
Process	23
Temperature classes	6

Temperature compensation 22
Temperature/pressure ratings 23
Type code 8

U

Uncertainty of measurement 22
Use 4

W

Warnings 3
Weight 24
Workplace safety 4



71491339

中国E+H技术销售 www.ainstru.com

电话: 18923830905

邮箱: sales@ainstru.com